

Volvo Construction Equipment Building Tomorrow



Volvo Wheel Loaders 34-39 t 421 hp



A CLASS OF ITS OWN

Committed to its legacy, Volvo was the first to present a 35 tonne wheel loader to the industry in 2011 – with the L250G. Created with the customer for the customer, Volvo brings the next generation wheel loader – the L260H.



Progress is in our DNA

Since introducing our first wheel loader, Volvo has continued to refine its concept for more than half a century.



The world's first wheel loader to feature a parallel lift arm system and attachment bracket with quick coupler – the H-10 The first wheel loader with direct injected turbo engine – Volvo BM 1641

Volvo introduced the world's first truly low-emission diesel engines in construction equipment (1974) Volvo introduced the world's first automatic gear shifting system (Automatic Power Shift) and load sensing hydraulic technology Comfort Drive Control

Boom suspension system

Volvo patented Torque Parallel linkage (1991)

Smarter, stronger, faster

345 In an industry that's always evolving, with growing business demands, customers need a machine they can rely on. An asset to your operation, the L260H is a reliable machine, which has been upgraded with innovative technologies and increased payload capacity, for greater productivity. Bringing you quality as standard and so much more, unlock the full potential of your machine through our dealer network.



Over the years, we have revolutionized our machines, bringing customers unparalleled productivity and efficiency.



Volvo sets the standard for the attachment bracket (ISO 23727)

OptiShift CareTrack



Introduction of the L250G – the first in its class

Load Assist, powered by the award-winning Volvo Co-Pilot



New generation OptiShift

Second generation load sensing hydraulics – Patent pending

L260H

Get it done, faster

Primed for productivity, the innovative L260H combines the latest Volvo technology with power and upgraded components to help you increase your payload. To achieve ultimate performance, select from a range of tailor made Volvo attachments.

Volvo engine

Engineered for efficiency and productivity, the L260H is fitted with a powerful D13 engine, delivering 6% more power and 5% more torque than the L250H.



New transmission

For ultimate performance, the L260H has been upgraded with the new HTL310 transmission, which works in harmony with the powerful engine and axels. The new converter delivers increased torque output, resulting in better performance. For faster acceleration and smooth operation, the steps between gears have been reduced.



Fast cycle times


Achieve shorter cycle times with next generation load sensing hydraulics, designed to enhance the responsiveness of attachments and improve the lifting and lowering speed of the boom.



Matched and attached


Get the most out of your L260H with our range of purposebuilt attachments, perfect for applications such as quarrying, aggregates, mining and heavy infrastructure. Form one solid and reliable unit with attachments that are ideally matched by size and design to your machine's parameters – including linkarm geometry, and breakout and lifting forces.



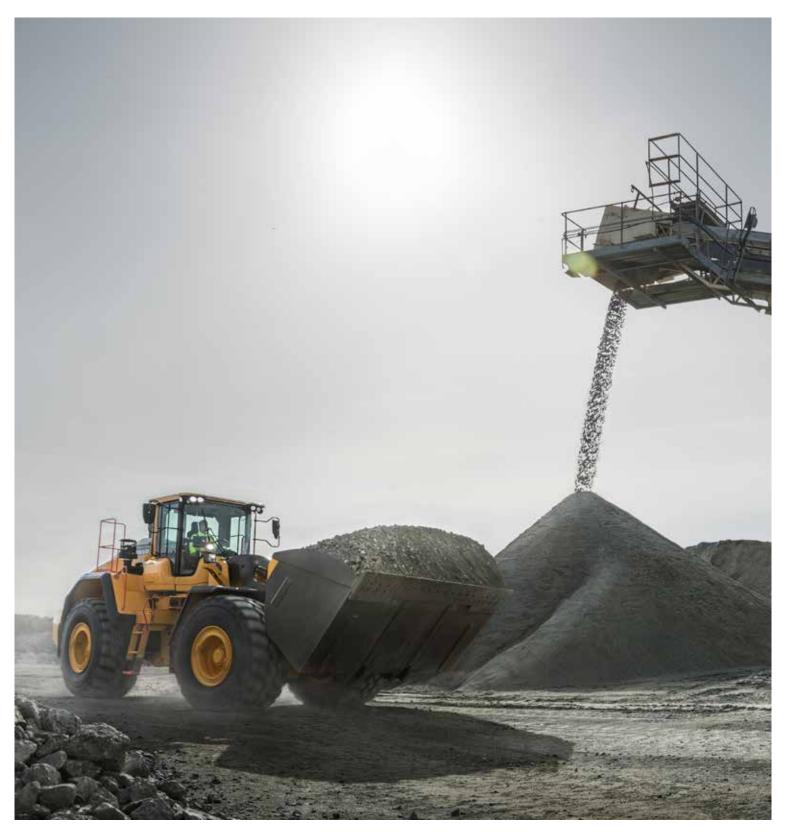

BOOST YOUR PRODUCTIVITY BY UP TO 15%

Increase your productivity with the L260H. Boasting up to 15% greater productivity than its forerunner, thanks to the increased wheel base (50mm), and optimized weight distribution of the front frame and lifting arm system, enabling the use of larger buckets.

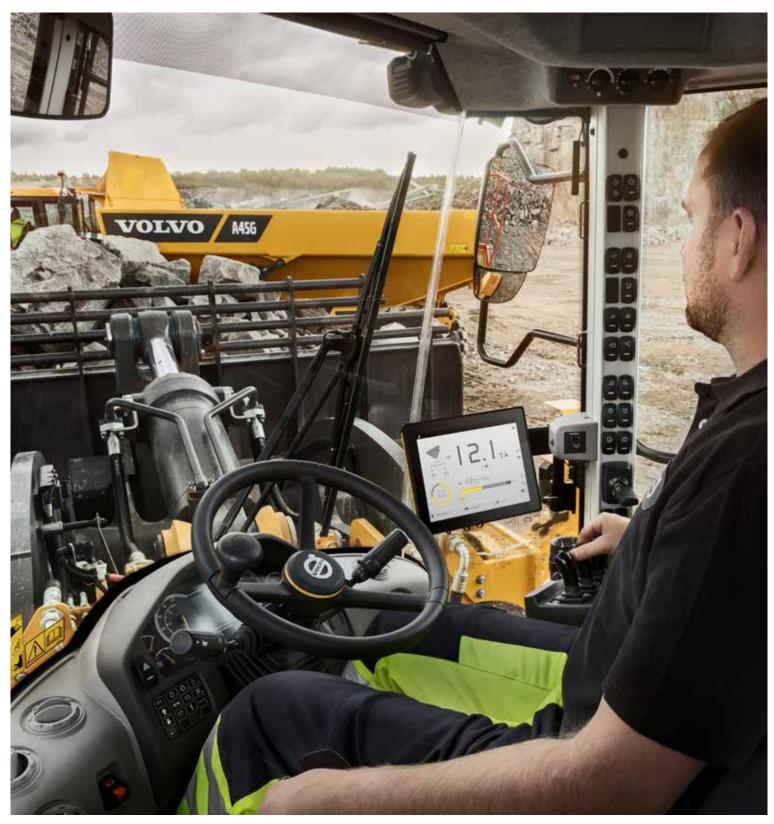



Unlock the full potential of your machine's productivity with Load Assist, a dynamic load weighing system up to 1% accuracy. Powered by the 10" Volvo Co-Pilot touchscreen, the system enables you to monitor the amount of material moved and easily manage work orders – the data can then be stored and accessed remotely. In addition, you can track your machine's fuel efficiency with the help of CareTrack.

Smarter operation

Engineered for efficient and smart work, the L260H is fitted with new generation hydraulics and improved technology. Enhanced by Load Assist and Volvo Site Simulation, the intelligent systems offer valuable insight about your operations, reducing fuel consumption and increasing productivity.

Increase your fuel savings by 10%

Do more with less fuel, thanks to a powerful engine and new generation hydraulics, which save hydraulic pump power for other functions, by reducing fluid flow when lowering and dumping. Coupled with the new dry P-Brake, which eliminates drag losses caused by the internal wet multi-disk brake.



Volvo Site Simulation

Lower your cost per tonne and gain valuable insight into your operations, with Volvo Site Simulation. Using detailed information about your machinery, fleet choices and site configuration, we'll devise a list of personalized recommendations to increase the efficiency and profitability of your operation.



New generation OptiShift

For improved cycle times and greater fuel efficiency, customize the lock-up engagement of your machine with new generation OptiShift. The improved technology integrates the Reverse By Braking (RBB) function – patented by Volvo – and the new torque converter with lock-up, creating a direct drive between the engine and transmission, reducing fuel consumption.



Eco pedal

Save on machine wear and increase fuel efficiency with the eco pedal. Uniquely designed by Volvo, the eco pedal encourages economical operation, by applying a mechanical push-back force in response to excess use of the accelerator.



Stronger

Unlock the full potential of your machine and take on demanding applications, with a range of purpose built attachments. Volvo can custom build attachments to your specific requirements, increasing your productivity.

Rehandling bucket

Experience up to 5% greater productivity with the new 7.3 m³ Volvo Rehandling bucket. The redesigned bucket is easier to fill and minimizes spillage, thanks to new convex sides and an improved spill guard. To prevent spillage and absorb shocks, opt for the Boom Suspension System, which automatically engages, depending on gear or speed selection.




Proven Z-bar linkage


For strength in demanding applications, Volvo's proven Z-bar linkage provides high breakout force. The robust lifting arm enables fully loaded buckets to be elevated to maximum height and fast hydraulic speeds offer quick cycle times. For long lasting performance, the lifting arm has double sealing on each of the pins.



Protect your bucket

Extend the life of your bucket with a choice of reinforcement options. Bolt-on edges protect the bottom edge of the bucket, while segments protect the cutting edge of the bucket, increasing durability.

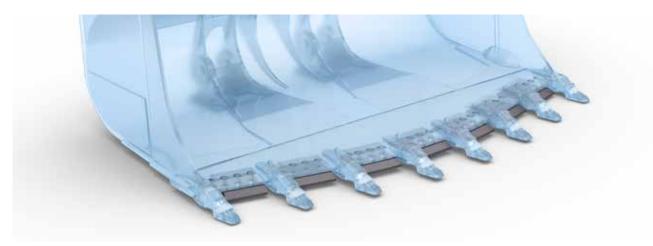

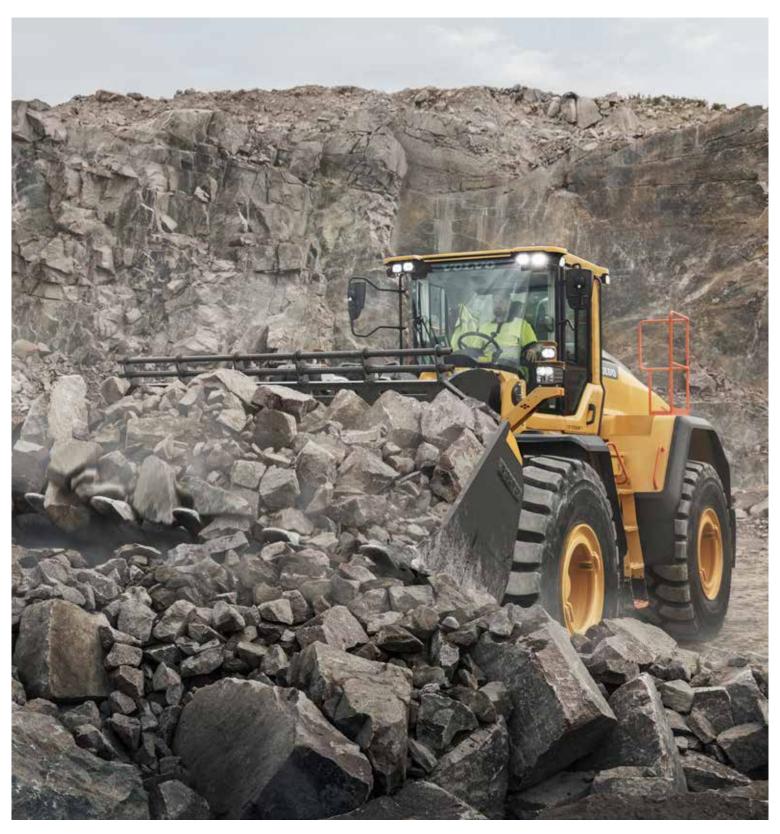



For easier filling and greater productivity, the new Volvo Rock bucket* boasts a longer floor and optimized radius and holds 11.5% more material than before. For tunneling applications, Volvo also offers Side Dump Rock buckets.

Intelligently productive

FULLY LOADED

- Redesigned Rock bucket holds 11.5% more material
- New Rehandling bucket up to 5% greater productivity
- Custom built attachments
- Z-bar lifting arm with double sealing on each pin



VOLVO SERVICES

- Genuine Volvo Parts
- Operator training
- CareTrack
- Volvo Site Simulation




INCREASE YOUR FUEL SAVINGS BY 10%

- New generation OptiShift
- New dry P-brake
- Saved hydraulic pump power
- Eco pedal
- Load Assist

MAXIMIZE YOUR UPTIME

- Delayed engine shutdown
- Easier access to the P-brake and BSS accumulators
- Tilting cab 30° or 70°
- Electronically-operated engine hood
- Strong frame and central hinge

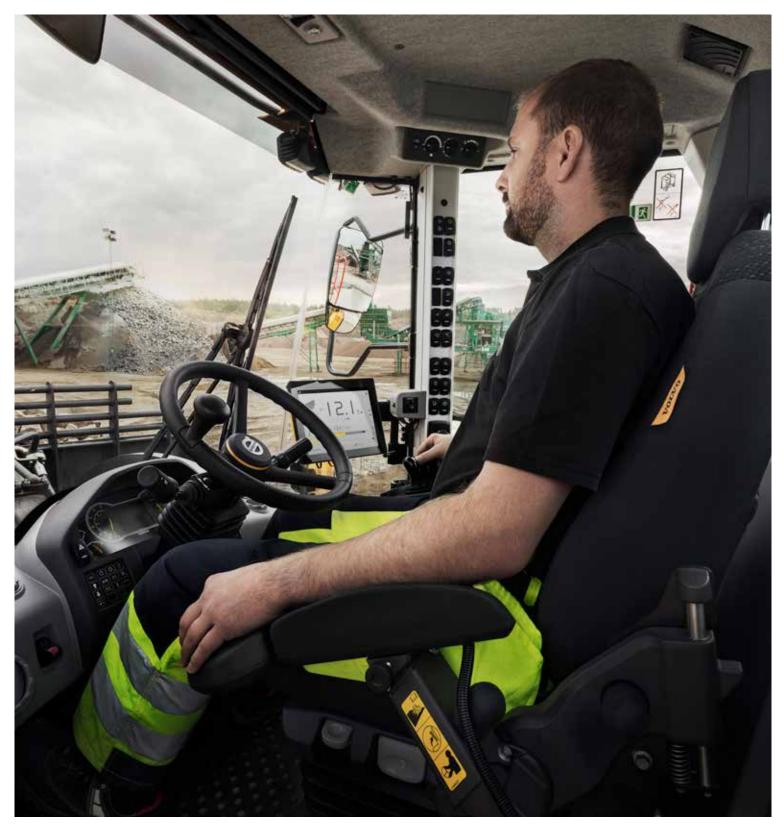

THE OPERATOR'S CHOICE

Operate in comfort from the best cab on the market, the Volvo cab can be equipped with a new adjustable seat. Access the cab safely and effortlessly using the steps and open the door with ease, thanks to the optional remote-control opener.

Boost your performance

Built with the customer, for the customer, the L260H boasts a range of features to enhance your operating experience. For increased productivity, the Volvo cab can be customized to your preference and additional cameras offer greater visibility.

Comfortably productive

Customize your machine and ensure precise control of hydraulic functions, with the choice of single or multi levers. To get the most out of each operation, select from three hydraulic modes, according to your preferred responsiveness. To reduce operator fatigue and improve productivity, Comfort Drive Control gives you the opportunity to steer the machine from a small lever.



Visibility

To enhance visibility, the L260 H has new rear-view mirrors and can be equipped with a rear-view camera. Optimized by the radar detect system, which works with the camera to give a visual and audible alert to the operator of unseen on-coming objects. Orange handrails and steps have been placed on the machine, intended to stand out to the operators and maintenance staff.



Bucket leveling function

Take your productivity to the next level with the new bucket leveling function. Automatically return the bucket to level from both dump and curl positions, enhancing operator performance.



Operator training

Increase productivity and reduce fuel consumption by learning how to operate your wheel loader in the most efficient way. Volvo offers operator training, which encompasses the best practices in the industry.



Maximize your uptime

Offering strength in demanding applications, the L260H is built to last. Maintain the life of your machine with simple serviceability and proactive dealer support, as well as flexible maintenance and repair plans.

Improved component access

Minimize downtime and increase component life with easier access to the Boom Suspension System accumulators – now placed on the outside of the front frame – and P-brake, which is now external.



Durable by design

Designed with durability in mind, the L260H is built with a strong frame structure, ideally-matched to Volvo powertrain. The hydraulically-driven cooling fan regulates component temperature and automatically reverses, permitting self-cleaning of the cooling units.



Delayed shutdown


Reduce the wear on your engine with new delayed engine shutdown, which can be scheduled to activate automatically by the operator. The intelligent function turns off the machine when the turbo charger has cooled down to the appropriate temperature, reducing component wear.



Here to support you

Maintain productivity and machine uptime with our range of readily available Genuine Volvo Parts – all backed by Volvo warranty. We're here to help you stay on track, offering flexible maintenance and repair plans.



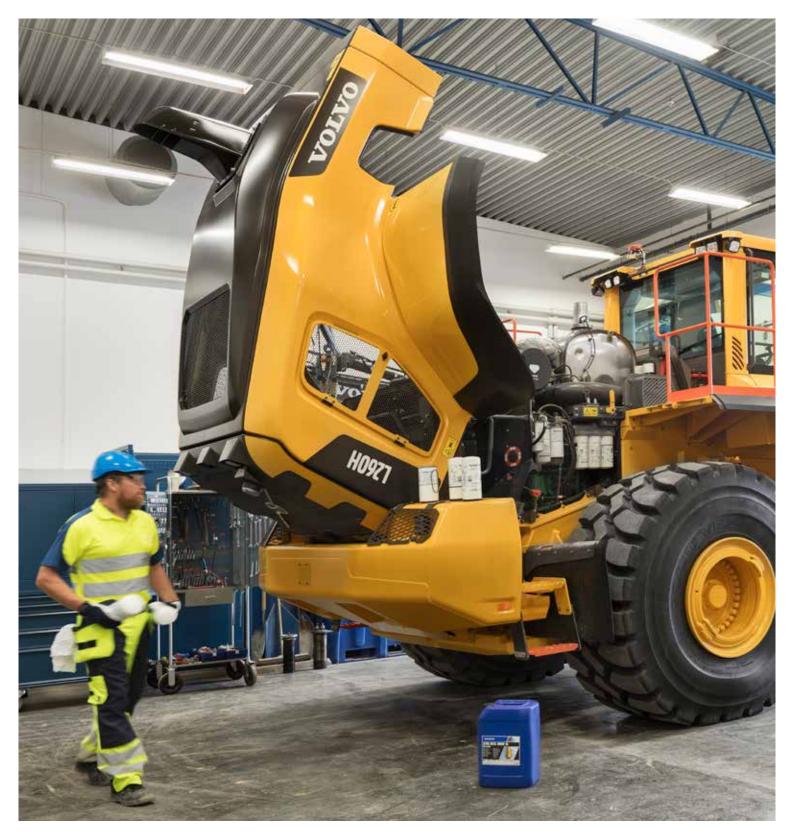

INDUSTRY LEADING ServiceAbility

For unrestricted access to vital components, the Volvo cab can be tilted to either a 30° or 70° angle. For improved serviceability and easy access to the engine, the wide-opening engine hood is operated electronically.


Volvo L260H in detail

Engine

V-ACT Stage IIIA, 13 liter, 6-cylinder straight turbocharged diesel engine with 4 valves per cylinder, overhead camshaft and electonically controlled unit injectors. The engine has wet replacable cylinder liners and replacable valve guides and valve seats. The throttle applications is transmitted electrically from the throttle pedal or the optional hand throttle.

Air Cleaning: 2 stages. Cooling system: Hydrostatic, electronically controlled fan and intercooler of the air-to-air type.

Engine	Volvo	D13E
Max. power at	r/min	1 500
SAE J1995 gross	kW	310
	hp	421
ISO 9249, SAE J1349 net	kW	309
	hp	420
Max. torque at	r/min	1 100
SAE J1995 gross	Nm	2 343
ISO 9249, SAE J1349 net	Nm	2 328
Economic working range	r/min	800 - 1600
Displacement	I	12.8

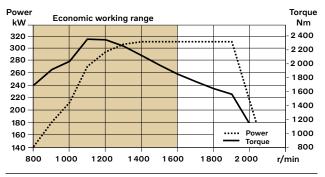

Electrical system

Central warning system: Contronic electrical system with central warning light and buzzer for following functions: - Serious engine fault - Low steering system pressure following functions: - Letter states in computer for computer - Over speed warning engine - Interruption in communication (computer fault)

Central warning light and buzzer with the gear engaged for the following functions: - Low engine oil pressure - High engine oil temperature - High charge air temperature - Low coolant level - High coolant temperature - High crank case pressure - Low transmission oil pressure - High transmission oil temperature - Low brake pressure - Engaged parking brake - Fault on brake charging - Low hydraulic oil level - High hydraulic oil temperature - Overspeeding in engaged gear - High brake cooling oil temperature front and rear axles.

Voltage	V	24
Batteries	V	2 x 12
Battery capacity	Ah	2 x 170
Cold cranking capacity, approx	А	1000
Alternator rating	W/A	2 280/80
Starter motor output	kW	7

Drivetrain

Torque converter: Single-stage. Transmission: Volvo countershaft transmission with single lever control. Fast and smooth shifting of gears with Pulse Width Modulation (PWM) valve. Torque converter with lockup. Transmission: Volvo Automatic Power Shift (APS) with fully automatic

shifting 1-4 and mode selector with 4 different gear shifting programs, including AUTO.

Axles: Volvo fully floating axle shafts with planetary hub reductions and nodular iron axle housing. Fixed front axle and oscillating rear axle. 100% differential lock on the front axle.

Transmission	Volvo	HTL310
Torque multiplication, stall ratio		2.02:1
Maximum speed, forward/reverse		
1-4	luna /la	0.7/0.0

1st gear	km/h	6.7/6.6
2nd gear	km/h	11.6/11.4
3rd gear	km/h	21.7/21.4
4th gear	km/h	36.5/36.1
Measured with tires		29.5R25 L4
Front axle/rear axle		AWB 50B/41
Rear axle oscillation	±°	15
Ground clearance	mm	600
at oscillation	0	15

Steering System

Steering system: Load-sensing, hydrostatic articulated steering. System supply: The steering system has priority feed from a loadsensing axial piston pump with variable displacement. Steering cylinders: Two double-acting cylinders

Steering cylinders		2
Cylinder bore	mm	90
Rod diameter	mm	60
Stroke	mm	525
Working pressure	MPa	26
Maximum flow	l/min	202
Maximum articulation	+ °	37

Service Refill

Service accessibility: Large, easy-to-open hood covering whole engine department, electrically operated. Fluid filters and component breather air filters promote long service intervals. Possibility to monitor, log and analyze data to facilitate troubleshooting.

E 11 1		0.0.0
Fuel tank	I	366
DEF/AdBlue [®] tank	l I	31
Engine coolant	I	55
Hydraulic oil tank	1	226
Transmission oil	I	48
Engine oil	1	50
Axle oil front	I	78
Axle oil rear	I	80

Hydraulic system

Hydraulic system System supply: Two load-sensing axial piston pumps with variable displacement. The steering system always has priority. Valves: Double-acting 2-spool valve. The main valve is controlled by a 2-spool pilot valve. Lift function: The valve has three positions; raise, hold and lower position. Inductive/magnetic automatic boom kickout can be switched on and off and is adjustable to any position between maximum reach and full lifting height. Tilt function: The valve has three functions including rollback, hold and dump. Inductive/magnetic automatic tilt can be adjusted to the desired bucket angle. Cylinders: Double-acting cylinders for all functions. Filter: Full flow filtration through 10 micron (absolute) filter cartridge. Working pressure maximum, pump 1 for

Working pressure maximum, pump 1 for working hydraulic system	MPa	29.0 ± 0.5
Flow	l/min	252
at	MPa	10
engine speed	r/min	1900
Working pressure maximum, pump 2 for steering-, brake-, pilot- and working hydraulic system	MPa	31.0 ± 0.5
Flow	l/min	202
at	MPa	10
engine speed	r/min	1900
Working pressure maximum, pump 3 for brake- and cooling fan system	MPa	25.0 ± 0.5
Flow	l/min	83
at	MPa	10
engine speed	r/min	1900
Pilot system, working pressure	MPa	3.2 - 4.0
Cycle times		
Lift	s	7.1
Tilt	s	1.9
Lower, empty	S	4.1
Total cycle time	s	13.1
Lift Arm System		
Z-bar		
Lift cylinders		2
Cylinder bore	mm	190
Piston rod diameter	mm	110
Stroke	mm	873
Tilt cylinder		1
Cylinder bore	mm	220
Piston rod diameter	mm	120
Stroke	mm	570


Brake System

Brake System		
Service brake: Volvo dual-circuit system with nitrogen accumulators. Outboard-mounted fully hydraulic oper oil circulation-cooled wet disc brakes. The operator ca declutch of the transmission when braking by a switch panel. Parking brake: Dry disc brake. Applied by spring force release with a switch on the instrument panel. Secondary brake: Dual brake circuits with rechargeab circuit or the parking brake fulfills all safety requireme Standard: The brake system complies with the require	ate n s n or , eli e a nts	d, fully sealed elect automatic n the instrument ectro-hydraulic ccumulators. One
Number of brake discs per wheel front/ rear		2 – 1
Number of brake discs per wheel front		2
Number of brake discs per wheel		1
Accumulators	Т	2 x 1.0 + 1 x 0.5
Accumulators for parking brake	Ι	1 x 0.5
Cab		
operator's field of vision. Display for Contronic monito Heater and defroster: Heater coil with filtered fresh air and 11 speeds. Defroster vents for all window areas. Operator's seat: Operator's seat with adjustable susper retractable seatbelt. The seat is mounted on a bracket and floor. The forces from the retractable seatbelt are rails. Standard: The cab is tested and approved according t FOPS (ISO 3449). The cab meets with requirements 6055 (Operator overhead protection - Industrial truck ("Operator Restraint System"). Refrigerant of the type R134a is used when this mach with air conditioning. Contains fluorinated greenhouse Warming Potential 1.430 t CO2-eq	ens on abs o R aco s) a	d fan with auto ion and the rear cab wall orbed by the seat OPS (ISO 3471), cording to ISO ind SAE J386 is equipped
Ventilation m ³ /m	nin	9
Heating capacity k	W	16
Air conditioning (optional) k	W	7.5
Sound Level		
Sound pressure level in cab according to ISO 6396		
-рл	βB	70
External sound level according to ISO 6395 and EU 2000/14/EC	No	ise Directive
L _{WA}	βB	109

Specifications

		Standard boom	Long boom
A	mm	9 670	9 974
3	mm	7 590	7 860
	mm	3 800	3 800
))	mm	520	529
5 <u>-</u>	mm	1 910	1 997
		3 720	3 726
1	mm	3 610	
-1	mm		3 621
	mm	2 870	2 883
	mm	2 133	2 133
1	mm	3 090	3 408
	mm	4 320	4 683
	mm	4 620	4 989
	mm	6 450	6 816
1	mm	1 810	1 733
1	mm	2 390	2 668
	0	62	57
prward dump at K and M	0	43	45
	o	43	47
	o	42	44
1	o	48	51
	0	75	81
irading angle	0	42	46
3 3 3 4	mm	156	214
*	mm	560	650
	mm	3 580	3 580
	mm	2 400	2 400
	mm	3 160	3 160
	mm	3 840	3 848
1	mm	16 370	16 597
2	mm	7 260	7 259
3	mm	4 100	4 099
4	0	37	37

* Carry position SAE Bucket: 6.4 m³ STE P T SEG Where applicable, specifications and dimensions are according to ISO 7131, SAE J732, ISO 7546, SAE J742, ISO 14397, SAE J818.

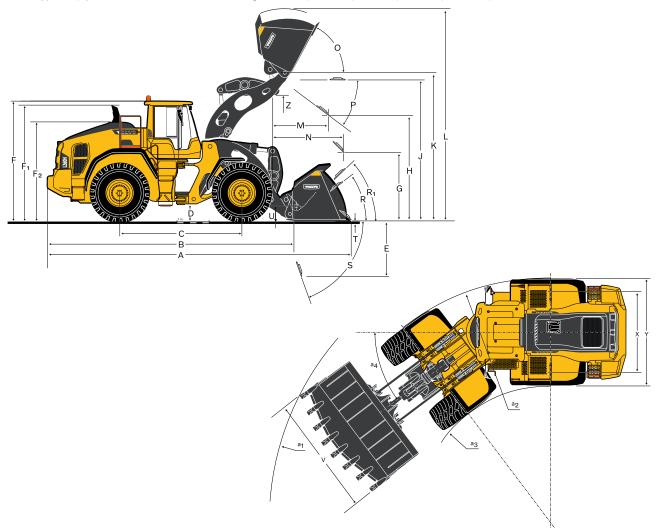

.....

		REHANDLING (7)		GENERAL PURPOSE (5)		ROCK (6)			SAND (4)	LONG BOOM (2)	
		6.9 m ³ STE P BOE	7.3 m ³ STE P BOE FF (1)	7.3 m ³ STE P BOE	6.4 m ³ STE P T SEG	6.8 m ³ STE P T SEG	5.5 m ³ STE RO P T SEG	5.9 m ³ STE RO P T SEG	6.5 m ³ SPN P T SEG	6.8 m ³ STE P BOE FF (1)	
Volume, heaped ISO/SAE	m ³	6.9	7.3	7.3	6.4	6.8	5.5	5.9	6.5	6.8	-
Volume at 110% fill factor	m³	7.6	8	8	7	7.5	6.1	6.5	7.2	7.5	-
Static tipping load, straight	kg	27 550	27 610	27 330	25 830	25 640	26 980	27 050	26 020	25 180	-3 300
at 35° turn	kg	24 440	24 490	24 210	22 890	22 710	23 980	24 040	23 020	22 330	-3 010
at full turn	kg	24 090	24 130	23 850	22 560	22 370	23 630	23 700	22 680	22 000	-2 970
Breakout force	kN	290.0	284.1	283.2	302.6	299.6	335.9	325.2	256.1	272.0	-29.5
A	mm	9 4 3 0	9 4 4 0	9 470	9 670	9 690	9 470	9 530	9 960	9 520	320
E	mm	1 690	1 710	1730	1 910	1920	1 710	1760	2 160	1790	100
Н (3)	mm	3 250	3 260	3 230	3 090	3 070	3 250	3 200	2 920	3 200	300
L	mm	6 590	6 630	6 6 4 0	6 450	6 480	6 680	6 760	6 830	6 520	350
M (3)	mm	1 670	1720	1700	1 810	1820	1680	1700	2 0 2 0	1790	-90
N (3)	mm	2 330	2 2 3 0	2 350	2 390	2 400	2 320	2 340	2 520	2 270	270
V	mm	3 580	3 650	3 650	3 580	3 650	3 580	3 580	3 580	3 650	-
a1 clearance circle	mm	16 240	16 300	16 320	16 370	16 440	16 270	16 300	16 550	16 340	-
Operating weight	kg	34 030	33 990	34 170	33 240	33 360	34 630	34 560	35 190	33 050	480

(1) Flat floor bucket

(2) Measured with 5.5 m³ STE RO P T SEG bucket
(3) Measured to the tip of the bucket teeth or bolt-on edge. Dump height to bucket edge measured at 45° dump angle. (Spade nose buckets at 42°.)

(4) Measured with 29.5 R25 L3 tire

(5) Measured with 29.5 R25 L4 tire


(6) Measured with 29.5 R25 L5 tire
 (7) Measured with 29.5 R25 L4 tire and additional counterweight Note: This only applies to genuine Volvo attachments.

Bucket Selection Chart

The volume handled varies with the bucket fill and is often greater than indicated by the bucket's ISO/SAE volume. The table shows optimum bucket choice with regard to the material density.

Material	Bucket fill, %	Material density, t/m ³
Earth	110 - 115	1.4 - 1.6
Clay	110 - 120	1.4 - 1.6
Sand	100 - 110	1.6 - 1.9
Gravel	100 - 110	1.7 - 1.9
Rock	75 - 100	1.5 - 1.9

The size of rock buckets is optimized for optimal penetration and filling capability rather than the density of the material.

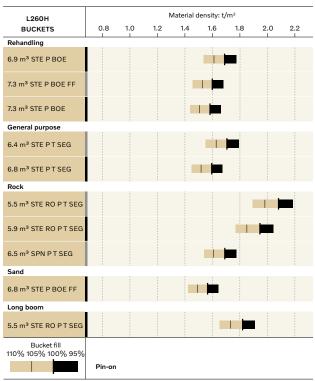

How to read bucket fill factor

Supplemental Operating Data

		Standa	rd boom	Long boom		
Tires 29.5 R25 L4		29.5 R25 L5 875/65R29 L3		29.5 R25 L5 875/65R29 L		
Width over tires	mm	50	100	50	100	
Ground clearance	mm	30	10	20	0	
Tipping load, full turn	kg	960	240	-2 120	-2 770	
Operating weight	kg	1 280	440	1 760	920	

Equipment

Engine	Engine			
Two stage air cleaner, pre-cleaner, primary and secondary filte	er			
Indicator for coolant level				
Preheating of induction air				
Fuel pre-filter with water trap				
Fuel filter				
Crankcase breather oil trap				
Exterior radiator air intake protection				
Drivetrain				
Automatic Power Shift				
Fully automatic gearshifting, 1-4				
PWM-controlled gearshifting				
Forward and reverse switch by hydraulic lever console				
Indicator glass for transmission oil level				
Differentials: Front, 100% hydraulic diff lock. Rear, convention	nal.			
OptiShift				

Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission oil pressure Coolant temperature Consumption Coverspeed at direction change Axle oil temperature Steering pressure Axtecharging Diesel Exhaust Fluid/AdBlue level Engine oil temperature Steering pressure Crankcase pressure Axtecharging Diesel Exhaust Fluid/AdBlue level Engine oil temperature Cingen coolant temperature Charge-air temperature Coolant temperature Coolant temperature Coolant temperature Coolant temperature Coolant temperature Coolant temperature Consumption Coverspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Crankcase pressure Crankcase pressure Coolant temperature Coolant temperature Coolant temperature Coolant temperature Consumption Coverspeed at concolant temperature Coolant temperature Coolant t		24 V, pre-wired for optional accessories
Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Contronic monitoring system Monitoring and logging of machine data Contronic monitoring system Contronic display Euel Consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Regeneration Engine colant temperature Engine oil pressure Transmission oil temperature Engine oil temperature Engine oil temperature Brake pressure Parking brake applied Brake Arging Overspeed at direction change Axte oil temperature Crankcase pressure Crankcase pressure Crankcase pressure Crankcase pressure Crankcase pressure High engine coolant temperature Engine oil temperature		
Hour meter Electric horn Instrument cluster: Fuel level Diesal Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil pressure Transmission oil pressure Transmission oil pressure Transmission oil pressure Parking brake applied Brake charging Overspeed at direction change Axte oit emperature Stering pressure Parking brakes Attachment lock open Saftey Belt Warning Level warnings Level Warning Level Diesel Exhaust Fluid/AdBlue level Engine colant temperature High cange-air temperature Sign in transmission clutches		· · ·
Electric horn instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Contronic monitoring system Monitoring and logging of machine data Contronic display Euel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Charge-air temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Steering pressure Arakonment lock open Safety Belt Warning Lighting brake Axie oil temperature Steering pressure Attachment lock open Safety Belt Warning Light on Consult Step Step Step Step Step Step Step Ste		
Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Duble brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil pressure Transmission oil pressure Transmission oil pressure Hydraulic oil temperature Brake charging Darke charging Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Stering pressure Axle oil temperature Stering pressure Axle oil temperature Brake charging Overspeed at direction change Axle oil temperature Stering pressure Axle oil temperature Stering pressure Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant temperature Engine coolant level Hydraulic oil level Engine coolant temperature Engine oil level Hydraulic oil level		
Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Armbient temperature Clock Test function for warning and indicator lights Barke test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Engine oil pressure Transmission oil temperature Engine oil pressure Transmission oil temperature Tersersison oil pressure Parking brake applied <		
Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Charge-air temperature Transmission oil temperature Brake test Fransmission oil level Brake charging Overspeed at direction change Axle oil temperature Steering pressure Attachment lock open Safety Belt Warning Level Warnings Level Warning Level Warning Level Marking Idevel Engine colant temperature High engine colant temperature High engine colant temperature High crankcase pressure High crankcase pr		Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature
Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine colant level Hydraulic oil herperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission oil temperature Slip in transmission oil temperature Slip in transmission oil temperature	L	Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function
Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine collant temperature Charge-air temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Aktachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine colant level Transmission oil level Hydraulic level Hydraul	C	Contronic monitoring system
Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Akte oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Engine colant level Transmission oil level Hydraulic oil level Engine colant temperature Engine torque reduction in case of malfunction indication: High engine oil temperature Low engine oil pressure High charge-air temperature Engine soure High charge-air temperature Engine soure High transmission oil temperature Engine soure High transmis	N	Nonitoring and logging of machine data
Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Engine coolant temperature Hydraulic oil level Engine coolant temperature Brake pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Hydraulic oil temperature High crankcase pressure High crankcase pressure High crankcase pressure High crankcase of malfunction indication: High transmission oil temperature Sip in transmission oil temperature Sip in transmission oil temperature Sip in transmission oil temperature Sip in transmission oil temperature	C	Contronic display
Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Charge-air temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil pressure Transmission oil pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Masher fluid level Engine torque reduction in case of malfunction indication: High engine oil pressure High crankcase pressure High crankcase pressure High crankcase pressure High crankcase pressure Engine shutdown to idle in case of malfunction indication: High ransmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature	F	uel consumption
Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Transmission oil pressure Transmission oil pressure Parking brake applied Brake charging Overspeed at direction change Akle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Engine oil level Engine coolant temperature Engine oil level Hydraulic oil level Hydraulic oil level Engine coolant temperature Engine oil level Engine coolant temperature Engine oil level Hydraulic oil level Engine shutdown to idle in case of malfunction indication: High engine oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Sip in transmission oil temperature Sip in transmission oil temperature Sip in transmission oil temperature	C	Diesel Exhaust Fluid/AdBlue consumption
Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Engine colant level Engine oil level Engine colant temperature Engine torque reduction in case of malfunction indication: High engine colant temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: H	A	Ambient temperature
Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Fuel level Diesel Exhaust Fluid/AdBlue level Engine torque reduction in case of malfunction indication: High engine coolant temperature Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil pressure High crankcase pressure High crankcase pressure High crankcase pressure High transmission oil temperature Slip in transmission clutches	C	Clock
Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil level Masher fluid level Engine torque reduction in case of malfunction indication: High engine colant temperature High crankcase pressure High transmission oil temperature Step in transmission oil temperature	T	est function for warning and indicator lights
Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Akle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine colant level Transmission oil level Hydraulic oil level Engine torque reduction in case of malfunction indication: High engine colant temperature High crankcase pressure High transmission oil temperature Silp in transmission clutches	E	Brake test
Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine colant temperature High engine oil pressure High crankcase pressure <t< td=""><td>T</td><td>est function, sound level at max fan speed</td></t<>	T	est function, sound level at max fan speed
Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Akle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil pressure Live engine oil temperature High crankcase pressure High crankcase pressure High crankcase pressure High transmission oil temperature Step oil pressure High transmission oil temperature Slip in transmission oil temperature Slip in transmission oil temperature Slip in transmission clutches	V	Battery charging
Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches		Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning
High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches		Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level
High transmission oil temperature Slip in transmission clutches		High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature
Keypad, background lit	E	High transmission oil temperature
	٢	Keypad, background lit

STANDARD EQUIPMENT

STANDARD EQUIPMENT	STANDARD EQUIPMENT
Hydraulic system	Service and Maintenance
Main valve, double acting 2-spool with hydraulic pilots	Engine oil remote drain and fill
Variable displacement axial piston pumps (3) for:	Transmission oil remote drain and fill
1 Working hydraulics, Pilot hydraulics and Brake system	Lubrication manifolds, ground accessible
2 Working hydraulics, Pilot hydraulics, Steering and Brake system3 Cooling fan and Brake system	Pressure check connections: transmission and hydraulic, quick-connects
Electro-hydraulic servo controls	Tool box, lockable
Electronic hydraulic lever lock	External Equipment
Automatic boom kick-out	Orange hand rails
Automatic bucket positioner	Fenders, front and rear
Double-acting hydraulic cylinders	Viscous cab mounts
Indicator glass for hydraulic oil level	Rubber engine and transmission mounts
Hydraulic oil cooler	Frame, joint lock
Brake System	Vandalism lock prepared for
Dual brake circuits	Engine compartment Dedictor grille
Dual brake pedals	Radiator grille
Secondary brake system	Lifting eyes Tie-down eyes
Parking brake, electro-hydraulic	Fabricated counterweight
Brake wear indicators	Counterweight, pre-drilled for optional guards
Cab	
ROPS (ISO 3471), FOPS (ISO 3449)	
Single key kit door/start	-
Acoustic inner lining	
Cigarette lighter, 24 V power outlet	
Lockable door	
Cab heating with fresh air inlet and defroster	
Fresh air inlet with two filters	
Automatic heat control	
Floor mat	
Dual interior lights	
Interior rear-view mirrors	
Dual exterior rear-view mirrors	
Sliding window, right side	
Tinted windshield glass	
Retractable seatbelt (SAE J386)	
Adjustable steering wheel	
Storage compartment	
Document pocket	_
Sun visor	
Beverage holder	
Windshield washer front and rear	
Windshield wipers front and rear	
Interval function for front and rear winers	

Interval function for front and rear wipers

Equipment

OPTIONAL EQUIPMENT	OPTIONAL EQUIPMENT
Engine	Hydraulic system
Air pre-cleaner, cyclone type	Boom suspension system
Air pre-cleaner, oil-bath type	Boom cylinder hose and tube guards
Air pre-cleaner, turbo type	Hydraulic fluid, biodegradable, Volvo
Engine auto shutdown	Hydraulic fluid, fire-resistant
Engine delayed shutdown	Hydraulic fluid, for hot climate
Engine block heater 230V/110V	Mineral oil for cold climate
Fuel fill strainer	Hydraulic 3rd function
Fuel heater	Single lever control, hydraulics 2 functions
Fuel filter, extra	Single lever control, hydraulics 3 functions
Hand throttle control	Brake System
Max. fan speed, hot climate	Oil cooler and filter front & rear axle
Radiator, corrosion-protected	Cab
Reversible cooling fan	Anchorage for Operator's manual
Reversible cooling fan and axle oil cooler	Automatic Climate Control, ACC
Tires	ACC control panel, with Fahrenheit scale Asbestos dust protection filter
29.5 R25	Ashtray
875/65 R29	Cab air pre-cleaner, cyclone type
Drivetrain	Carbon filter
Diff lock front 100%, Limited Slip rear	Cover plate, under cab
Speed limiter	Lunch box holder
Wheel/axle seal guards	Volvo Armrest, operator's seat, left
Electrical system	Operator's seat, Volvo air susp, heavy-duty, high back, heated
Anti-theft device	Operator's seat, (air seat std) 2-point seat belt
Alarm kit, anti-theft function in WECU	Operator's seat, (air seat std) 3-point seat belt
Battery disconnect switch, additional in cab	Radio installation kit incl. 12 volt outlet, left side
Emergency stop	Radio installation kit incl. 12 volt outlet, right side
Locking device, Tag out Lock out	Radio (with AUX, Bluetooth and USB connection)
Headlights, assym. left	Subwoofer
License plate holder, lighting	Steering wheel knob
Rear view camera, monitor	Sun blinds, rear windows
Rear view mirrors, el.adjusted and heated	Sun blinds, side windows
Reduced function working lights, reverse gear activated	Timer cab heating
Reverse alarm, audible	Window, sliding, door
Reverse alarm, white noise	Universal door/ignition key
Reverse warning light, strobe lighting	Remote door opener
Shortened headlight support brackets	Forward view mirror
Side marker lamps	Cab heater power outlet 240V Service and Maintenance
Warning beacon LED	
Warning beacon LED automatic	Automatic lubrication system
LED Head Light	Cleaner kit, with air blow gun
LED tail light	ROX, rapid oil exchange pump
LED working lights, attachments	Oil sampling valve
LED working lights on cab, front and rear	Refill pump for grease to lube system
	Tool kit
LED working lights on cab, front, 2 alt. 4 LED lamps LED working lights on cab, rear, 2 alt. 4 LED lamps	Wheel nut wrench kit
	CareTrack, GSM, GSM/Satellite
LED working lights, rear in grille, 2 LED lamps	Telematics, Subscription
LED working lights, front above head lamps, 2 LED lamps	Protective Equipment
LED work lights, side on cab, 4 LED lamps	Belly guard front
LED light packages	Belly guard rear
Working lights halogen, attachments	Belly guard rear, oil pan
Working lights on cab halogen, front and rear	Center hinge and rear frame guard
Working lights on cab halogen, rear	Cover plate, heavy-duty, front frame
Electrical distribution unit 24 volt	Cover plate, rear frame
Alternator 120 amp, heavy-duty	Cab roof, heavy-duty
Load Assist	Guards for front headlights
	Guards for radiator grill
Radar detect system	
Forward camera, colour	Guards for tail lights
	Guards for tail lights Windows, side and rear guards

OPTIONAL EQUIPMENT	OPTIONAL EQUIPMENT
External Equipment	Attachments
Cab ladder, rubber-suspended	Buckets:
Deleted front mudguards	Rock straight or spade nose
Fire suppression system	General purpose
Fire extinguisher	Re-handling
Fire extinguisher , two pieces	Side-dump
Mudguards, full cover, front and rear	Light material
Mudguards, full cover wideners and prot. Included	Wear parts:
Long boom	Bolt-on and weld-on bucket teeth
Tow hitch	Segments
Other Equipment	Cutting edge in three sections, bolt-on
CE-marking	Material handling arm
Comfort Drive Control (CDC)	
Counterweight, re-handling	
Secondary steering with automatic test function	
Sound decal, EU	
Sound decal, USA	
Reflecting stickers (decals), machine contour	
Reflecting stickers (stripes), machine contour Cab	
Noise reduction kit, exterior	

SELECTION OF VOLVO OPTIONAL EQUIPMENT

Wide tires



Rehandling package



Central lubrication system



Radar detect system



Seat and control options



Long boom



Not all products are available in all markets. Under our policy of continuous improvement, we reserve the right to change specifications and design without prior notice. The illustrations do not necessarily show the standard version of the machine.



Volvo Construction Equipment